



# Kids watch

— BY **annatel.family** —

USER MANUAL

→ INCLUDED IN THE BOX



GPS watch for children



USB charging cable



User Manual



Guarantee



Document on radio waves



## → ACTIVATING YOUR WATCH

### ACTIVATE THE SIM CARD

A sim card is already inserted in the watch. In order to use the features of the watch, it must be activated.

If you haven't already done so, you can activate it online at <http://www.annatel.family/activation> or by contacting us by phone at **\*0555** or on Whatsapp at **+972 55 500 6565**.

4

## START WATCH

### → STEP 1


Charge the watch for approximately 3 hours.

Turn it on by pressing the right side button for a few seconds.

Wait for a network connection (📶). Then wait for 2 to 3 minutes before moving on to step 2.

### → STEP 2

Download and install the « **Find my Kids** » app from your smartphone and launch the app.

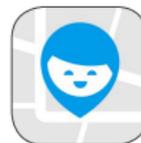

**Find My Kids**



5

### → STEP 3

Following the introduction screens, choose « **connect a GPS-watch** » and press « **Continue** ».

Scan the QR code on the back of the watch (or manually enter the number at the bottom of the sticker) and confirm.

Enter the phone number of the watch (i.e number of your « **Kids Watch** » mobile plan) and click « **Continue** ». Follow the instructions on the screen.

You can then set the basic settings of the watch or set them up later (SOS numbers, adding numbers to the phonebook, name, avatar and picture of the child).

### → STEP 4

The entire family can now fully enjoy all the features of the Kids Watch by **annatel.Family**

If you have not yet subscribed to a « **Kids watch** » mobile plan, you can do it online or by phone :



**<http://annatel.family>**



**\*0555**

## USING THE WATCH

### → THE SCREEN

#### BATTERY

In the upper right corner of the screen is the battery indicator.

#### CONNECTIVITY & ALERTS

In the upper left corner are your connectivity indicators:



1



2



3

1. **Mobile Network**
2. **Sounds**
3. **Mobile Data**

#### DATE & TIME

The time is displayed in the center of the screen. The date is displayed at the bottom right of the screen: the first 3 letters of the day and the date (without the year) below. For example: Thursday, February 28th: THU 02/28.

#### REWARDS

The number of rewards (hearts) is indicated above the date. This changes each time parents send rewards to their child.

## → THE MENU

### **CONTACTS & CALLS**

From this menu, the watch can call pre-registered numbers.

Press « contact » and then the right and left arrows to choose a contact.

To call, press the green button under the phone number. To hang up, press the red button on the screen or the button on the right side of the watch.

During the call, you can increase or lower the volume with the « + » and « - » green buttons on the right of the screen.

The watch can only receive calls from numbers stored in one of the watch's contact list or whitelisted numbers.

The watch will reject any call from an unknown number.

To pick up a call press the green button that appears on the screen.

### **VOICE CHAT**

This feature allows you to exchange voice messages and texts.

### **VOICE MESSAGES**

To send a voice message from the watch, press and hold the white « Press » button at the bottom of the screen and speak close to the watch. The message is sent when you release the button. To listen to a received voice message, touch the blue bubble.

### **TEXT MESSAGES**

The watch can only receive text messages from the app, it cannot send outgoing text messages.

A green bubble represents a text message. Touch the green bubble to display the message.

An alert will appear on the screen when you receive a text or a voice message.

## STEPS

If this feature is turned on, the watch acts as a pedometer. The number of steps may be inaccurate, sometimes significantly.

## FRIENDS

Not available.

## WATCH ID

In this menu, you will find the ID and QR code of the watch. You will then be able to register the watch in the app on your smartphones.

12

*\*Some features may not be available in some countries.*

## USING THE APP



### MAIN SCREEN




#### MAP

The child's location is displayed on the map.

You can refresh the location by clicking the  « **refresh** » button.


With the  button at the top left of the map, you can choose the display type (satellite, map, automatic), as well as the model of the map (Google, Apple, Open Street).

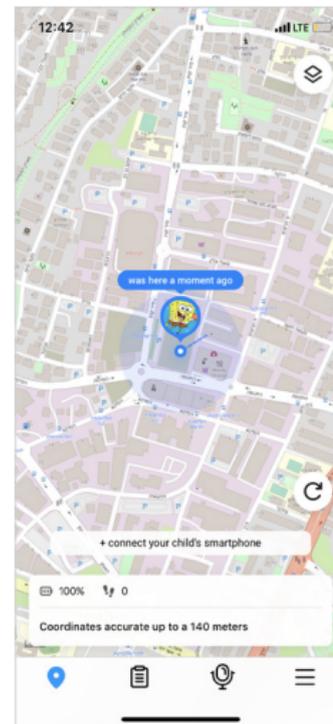

13


## WATCH PROFILE

The status of the watch and battery level, are indicated.

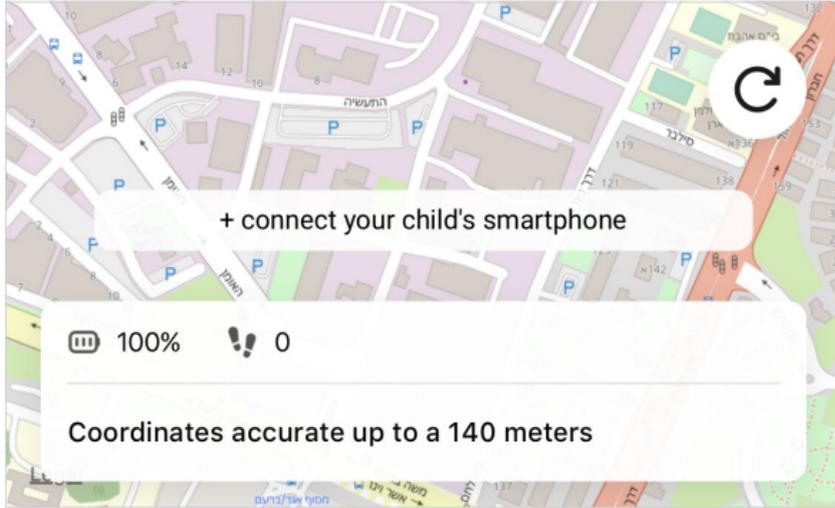

## EVENTS


Watch notifications such as entry/exit of the security zones, removal of the watch, emergency calls and weak battery etc.

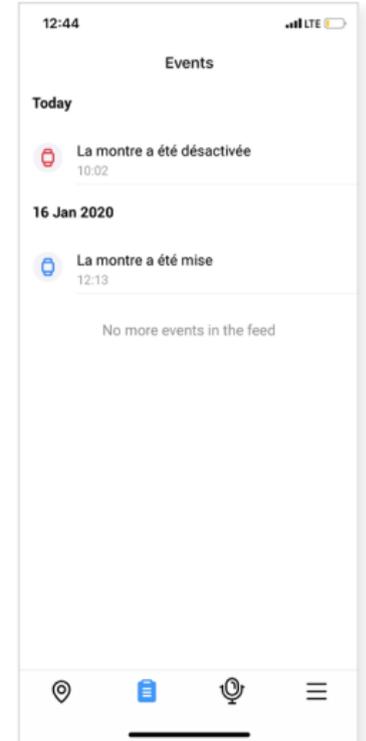



## SOUNDS AROUND THE WATCH

Press this button to hear what's happening around the watch. You will receive a call and automatically start listening. There will be no sound or displayed message indicating the current call on the watch.

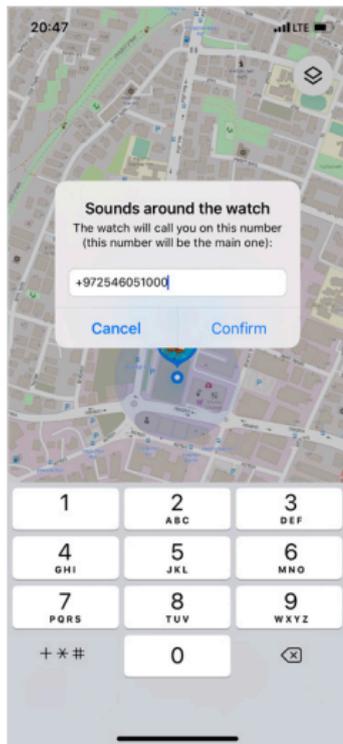


## MENU



## CHILD'S MOVEMENTS


Consult the movements history of the watch for a selected day. Choose the date in the bar at the bottom. Then, drag the bar at the top to the right or to the left to review the location of your child at any given moment on that day.

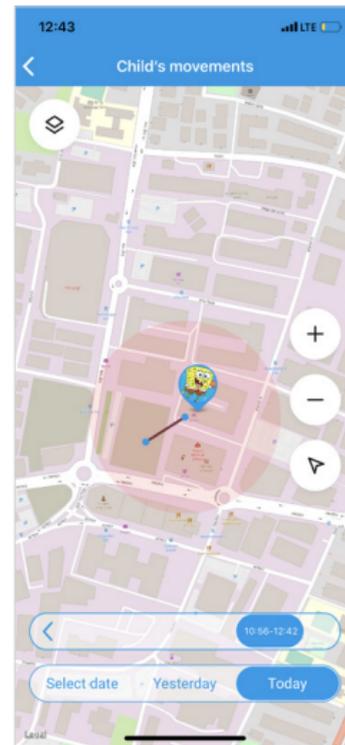



## PLACES

Create security zones (of different radiuses) for the watch. Move around the map, set the radius using the first bar (Use 500m radius or more to avoid false alerts due to poor GPS signals inside buildings). Name the place and save it. To delete a place, click the cross at the right of its name. Based on alert settings, you will be notified when your child enters or leaves these places.

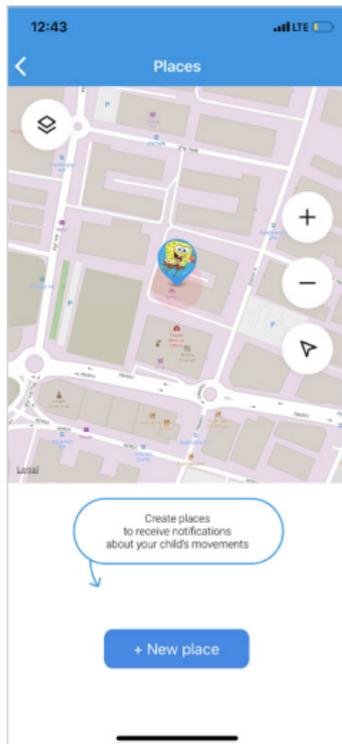

## MORE EXACT ROUTE

By clicking this button, your watch will be located in real time (if the GPS signal allows it).

**IMPORTANT** the battery life of the watch will be greatly reduced. Select this mode when necessary only. Click the same button to disable real-time location. When the mode is active, a green dot appears on the button.



## CALL ON THE WATCH

Press this button to call the watch. By picking up from the watch, you will have a normal phone conversation.



## PHOTOS FROM THE WATCH

Not available.




## CHAT

Send and receive voice messages to and from the watch. To record a message, press the  button.


Release the button to send the message. To delete a current recording, slide to the left as shown on the screen.

From the app, you can send a text message. The watch can only respond with a voice message.

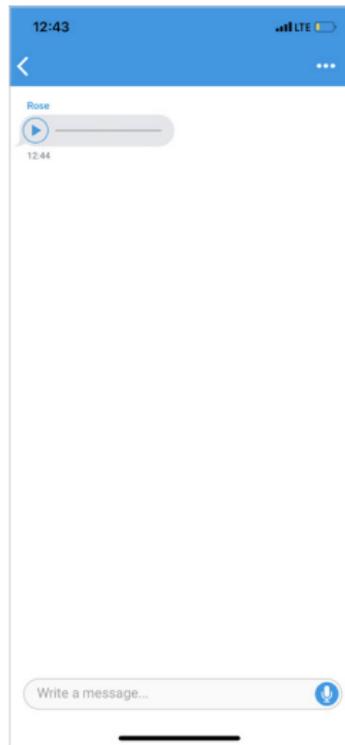

## SEND HEARTS

Choose the number of hearts to send. The child will receive an alert and will see a number of hearts on his watch. This can be used to reward your child, like « gold stars » or just to say « **I love you** ».

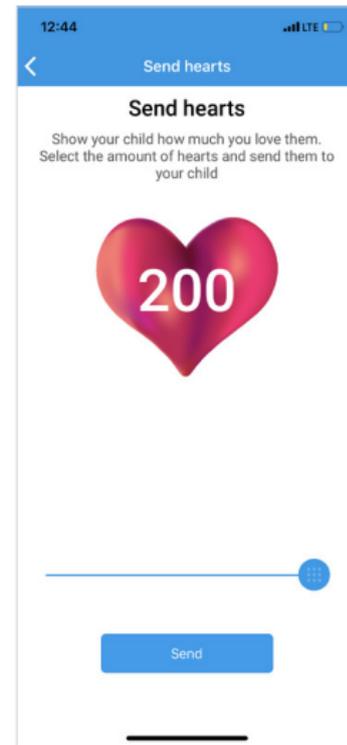



## WATCH SETTINGS



### PHONE NUMBER

Number assigned to the SIM card in the watch.



### CHILD'S USERNAME AND AVATAR

Name that will appear to represent the child within the app as well as the image.



### MAIN PHONE NUMBER

Number of the main parent.



### SOS NUMBERS

These numbers will be called when the child presses the emergency button on the watch. You can enter up to 3 numbers.



### PHONEBOOK

Add and delete contacts to the watch directory. These numbers will be the only ones accessible from the watch.



### WHITE LIST

The whitelist is the list of numbers that are allowed to contact the watch. Any calls from other numbers will automatically be rejected by the watch (the numbers from the watch directory or the parents are automatically accepted by the watch).



### **SET THE ALARM**

Set the different alarms.



### **DO NOT DISTURB**

Add time slots during which the watch will be on « Do not disturb/Class » mode. The screen of the watch will be locked. Only the emergency button will work.



### **SOUND MODE**

Ringtone, Vibrate, Mute, Ringtone and Vibrate.



### **SELECT LANGUAGE**

Languages supported by the watch are English, Hebrew, and French.



### **TIMEZONE**

Set the time of the watch here according to its time zone (Israel: UTC + 3).



### **UPDATE**

Automatic updates. We recommend choosing to update the watch every 15 minutes in order not to diminish battery life.



### **PEDOMETER**

Enable or disable the step counter of the watch.



### **DETECT THE LOCATION USING A MOBILE NETWORK**

By checking this option, the location of the watch will be determined by GPS but also by the mobile network. By unchecking it, only the GPS will determine the location of the watch. GPS is accurate but is usually not accessible indoors. The mobile network is inaccurate but generally available everywhere (except outside the network coverage area).



### **NOTIFY ME ABOUT ENTERING PLACES**

By checking this option you will receive a notification when the watch enters one of the designated places.



### **NOTIFY ME ABOUT EXITING PLACES**

By checking this option you will receive a notification each time the watch leaves one of the designated places.



### **NOTIFY ME ABOUT LOW BATTERY**

If enabled, the watch will send an alert when the battery is low.



### **BLOCK DIALER**

If the child's watch has a dial pad, you have the option to not display it and therefore restrict its calls to numbers in the directory of the watch.



### **NOTIFY WHEN THE WATCH IS TAKEN OFF**

If enabled, the watch will send an alert when it is removed.



### **CHANGE THE WATCH PASSWORD**

To change the password of the watch. Please note: Make sure to keep the new password because you will not be able to use the watch on other devices without it.



### **FIND THE WATCH**

Allows you to call the watch to find it if lost.



### **TURN OFF THE WATCH**

Turn off the watch remotely.

## IMPORTANT

Depending on the quality of the signal, the location of the watch and outdoor conditions, the location may be inaccurate. The accuracy in GPS localization (usually accessible outdoors) is about 20 meters. In Wi-Fi positioning, it is usually 20 meters but can sometimes reach 500 meters. In LBS positioning (location-based service via network triangulation), it can exceed 500 meters.



**annatel.family**



**\*0555**

---

You can find an Hebrew and French version of this document online at <http://annatel.family/manual>